

How To – Use the Church Dishwasher

It is important to switch the dishwasher on half an hour before it is to be used - Step 1 & 2 below

1. Turn on the power at the wall



2. Turn on the dishwasher – The LED Display shows four lines



3. Press the arrows button (1) until the desired Program (2) appears, then press the start button (3) >



(2)

A. Pr 1 = Programme 1 = Short Wash

B. Pr 2 = Programme 2 = Medium Wash

C. Pr 3 = Programme 3 = Long Wash

4. Use the drainage tray for the dishwasher racks to avoid water going everywhere



When finished please drain the dishwasher

5. To locate the drainage bung, lift out the filter tray



6. The bung is under the right hand filter tray



7. Pull out the bung (not easy)



8. Press the arrows button (1) until 'dr' (Drain) (2) appears, then press the start button (3) >



9. When the drain cycle has finished, Put the bung back in and the filter tray
Turn off the dishwasher and turn off the power switch on the wall